 




OBRÓBKA TERMICZNA

Części zamienne do urządzeń: **UNIVERSO**

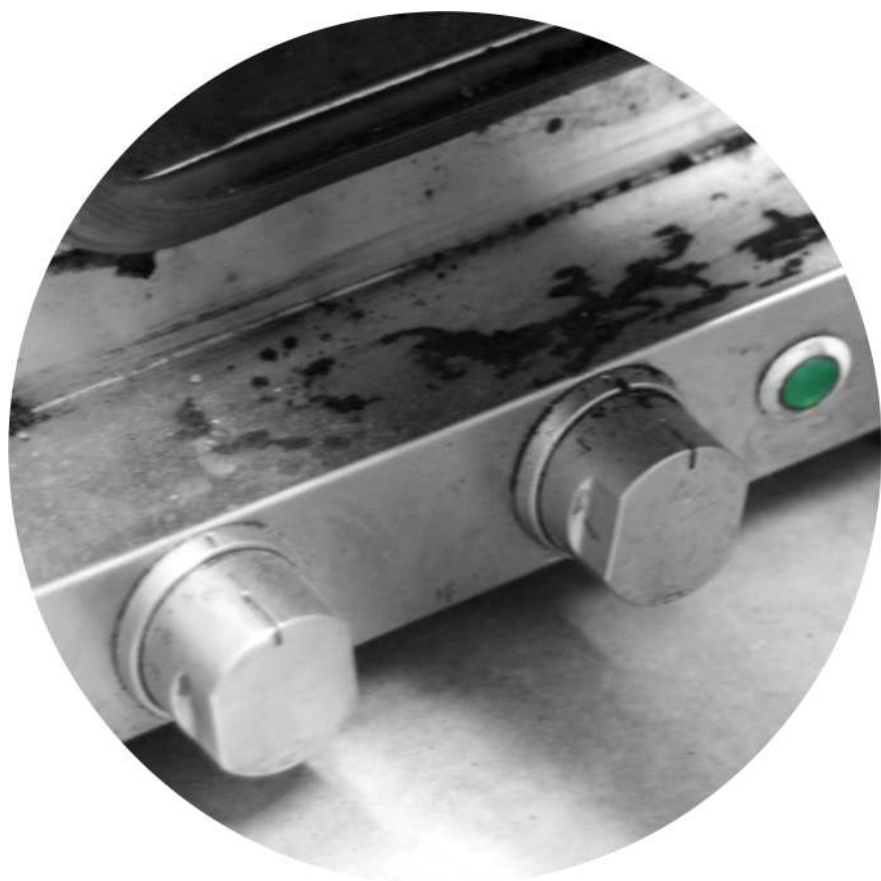

GASTROPARTS Sp. J.


Klonowica 37
87-100 Toruń
tel. +48 56 657 00 68
fax +48 56 657 00 67
gastroparts@gastroparts.pl



Lava rock grill



| Item | Order | Description | Model | OEM |
|------|--------|----------------|--------------|----------|
| 1 | 105421 | burner | PLX47, PLX80 | PLX20002 |
| 2 | 211012 | lava rock grid | | PLX20029 |

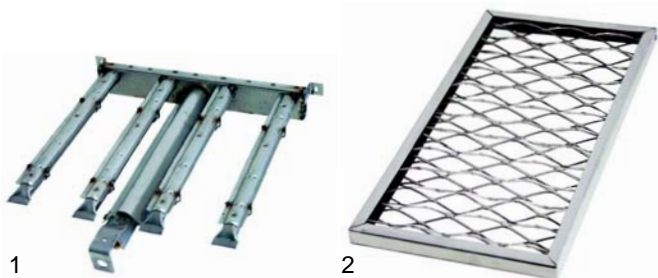 

| Item | Order | Description | Model | OEM |
|------|--------|----------------|-------|----------|
| 1 | 105422 | burner | PLV60 | PLX20003 |
| 2 | 211013 | lava rock grid | | PLX20030 |




| Item | Order | Description | Model | OEM |
|------|--------|--------------|---------------------|----------|
| 1 | 101087 | gas tap | PLX47, PLX60, PLX80 | PLX20009 |
| 2 | 110080 | knob | | PLX20010 |
| 3 | 110082 | symbol ring | | PLX20004 |
| 4 | 100046 | pilot burner | | |



| Item | Order | Description | Model | OEM |
|------|--------|-----------------------|---------------------|----------|
| 1 | 102041 | thermocouple | PLX47, PLX60, PLX80 | PLX20039 |
| 2 | 100708 | electrode | | PLX20034 |
| 3 | 100018 | ignition cable | | PLX20008 |
| 4 | 100003 | piezoelectric igniter | | PLX20001 |

 Chicken grill

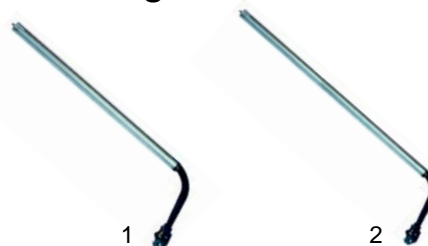


| Item | Order | Description | Model | OEM |
|------|--------|-------------|---------------------|---------|
| 1 | 105428 | burner | GS246, GS312, GS416 | GS20032 |
| 2 | 105429 | burner | GS366 | GSP080 |




| Item | Order | Description | Model | OEM |
|------|--------|----------------|----------------------------|----------|
| 1 | 100079 | pilot burner | GS246, GS312, GS366, GS416 | GS20030 |
| 2 | 102041 | thermocouple | | PLX20039 |
| 3 | 100701 | electrode | | GS20038 |
| 4 | 100018 | ignition cable | | PLX20008 |



| Item | Order | Description | Model | OEM |
|------|--------|-----------------------|----------------------------|----------|
| 1 | 100003 | piezoelectric igniter | GS246, GS312, GS366, GS416 | PLX20001 |
| 2 | 101086 | gas tap | | GSP041 |
| 3 | 110080 | knob | | A0377 |
| 4 | 110082 | symbol | | |

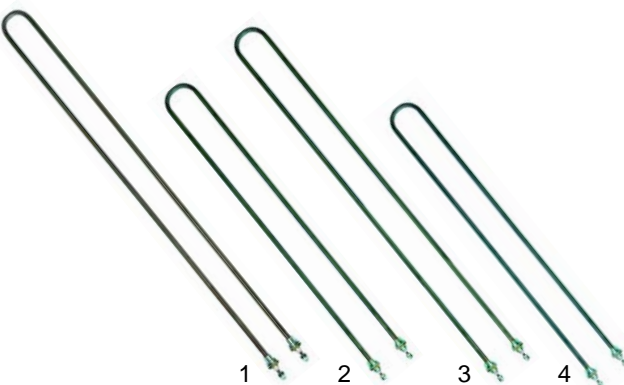 


| Item | Order | Description | Model | OEM |
|------|--------|-------------|-------|-------|
| 1 | 416016 | 1700W/230V | GE312 | A0344 |
| 2 | 416017 | 2400W/230V | GE246 | A0352 |
| 3 | 416025 | 3200W/230V | GE366 | A0351 |
| 4 | 416026 | 2300W/230V | GE416 | A0353 |

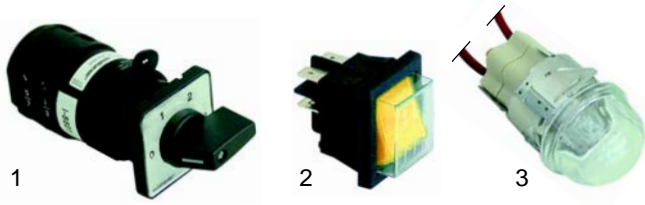 


| Item | Order | Description | Model | OEM |
|------|--------|----------------|-----------|----------|
| 1 | 345424 | step switch | GE246 | A0367 |
| 2 | 345576 | light switch | universal | GES20017 |
| 3 | 359259 | lamp, complete | | A0339 |



| Item | Order | Description | Model | OEM |
|------|--------|-------------------|--------------|----------|
| 1 | 345981 | switch (motor) | | GES20018 |
| 2 | 345648 | switch (heating) | GE312, GS312 | GES20016 |
| 3 | 345649 | push button/start | | GES20019 |

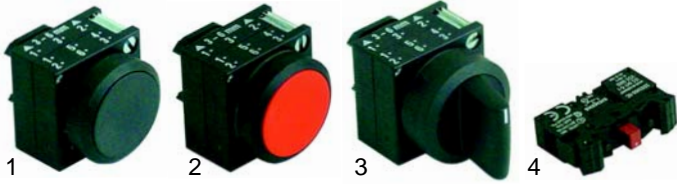 


| Item | Order | Description | Model | OEM |
|------|--------|-------------------------|---------------|--------|
| 1 | 345671 | push button | | A0341 |
| 2 | 345672 | push button, stop | GE246, GS246, | A0341 |
| 3 | 345673 | selector switch, I-0-II | GE366, GS366, | A0358B |
| 3 | 345674 | selector switch, 0-I | GE416, GS416 | A0358A |
| 4 | 345669 | contactor block | | A0330 |

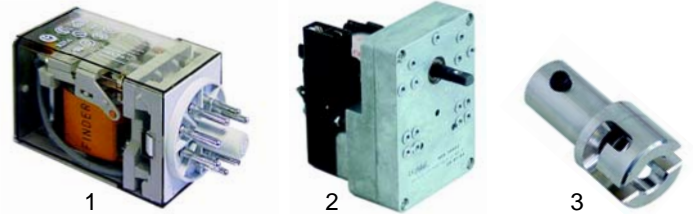 

| Item | Order | Description | Model | OEM |
|------|--------|--------------|--------------|----------|
| 1 | 380134 | relay | | GES20022 |
| 2 | 500499 | motor | GE312, GS312 | GES20026 |
| 3 | 690508 | skewer inlet | | GES20032 |



 www.gastroparts.pl

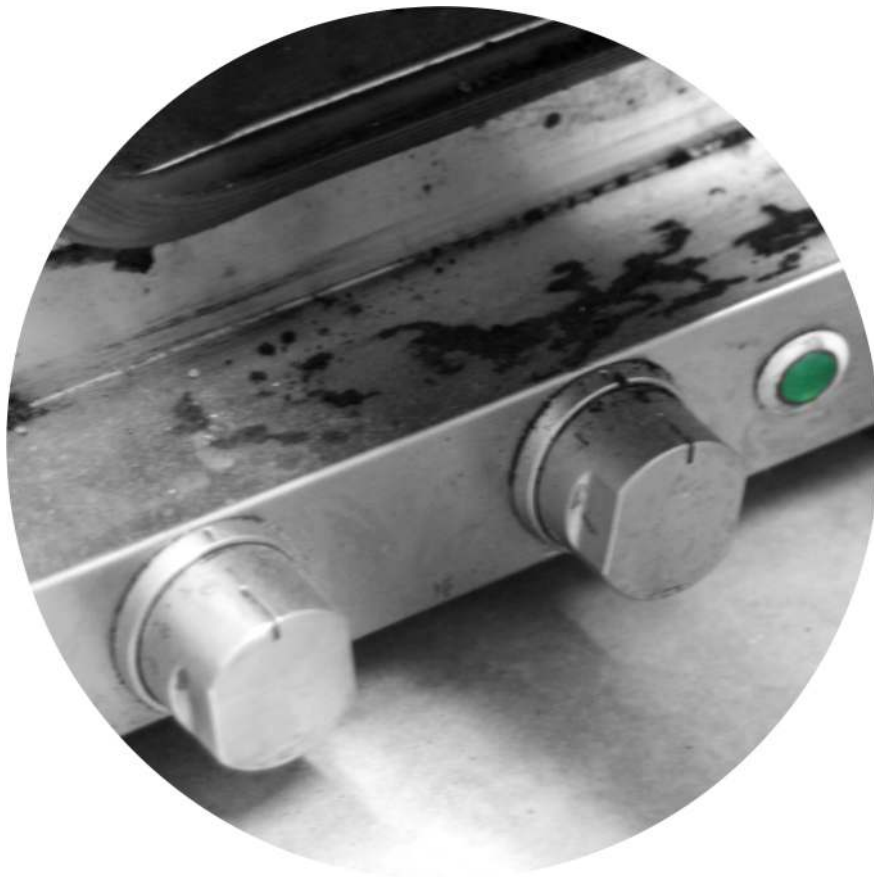

GASTROPARTS Sp. J.

Klonowica 37
87-100 Toruń
tel. +48 56 657 00 68
fax +48 56 657 00 67
gastroparts@gastroparts.pl

